

Installation Guidelines

B101 and B102 Headwalls

The following installation details are for standard products installed in good ground conditions.

1. Measure and mark the position and size of the hole required to accept the pipe entering the headwall.
2. Using a masonry drill, a series of holes are put into the headwall and then the centre “knocked out” of the hole.
3. A section of the soil bank should be dug out slightly smaller than the rear of the headwall.
4. The netting on the rear of the headwall should be wrapped over the top.
5. The pipe is then put through the headwall and the headwall is pushed into the bank with the sole of a boot.
6. The netting is then pulled back over the headwall and buried in the topsoil.
7. The pipe through the headwall is then finished to the required standard.
8. Topsoil or turf can then be placed around the headwall as required.

For poor ground conditions or non standard applications please contact our technical department on 01948 665321.

BCM GRC Ltd, Tel: 01948 665321
Fax:01948 666381 www.bcmgrc.com